

47447 / PC1250B

Position	ItemNo	Description
02	47594	Upper Left Hinge
03	47595	Connecting Piece
04	47596	Upper Right Hinge
05	47597	Screw
	47598	Washer
06	47599	T-type Nylon Gasket
07	47600	Upper Door Shaft
08	47562	Door Gasket Long
09	47563	Door Gasket Short
10	47574	Door Handle
12	47575	Glass Door
13	47564	Door Gasket Long
14	47576	Side Panel Right
16	47577	Side Glass
17	47578	Front Grill
18	47565	Digital Thermostat Carel
22	47566	LED Driver
23		
24	47568	LED Driver
25	47579	Condenser
27	46053	Fan Blade
28	47569	Fan Motor
29	47570	Compressor
30	47581	Condenser
31	47582	Drip Tray
32	47583	Filter Drier
33	47584	Door Stopper
35	47585	Door Spring Stopper
36	47586	Door Spring
37	47571	Door Spring Right
	47572	Door Spring Left
38	47601	Lower Left Hinge
	47602	Lower Right Hinge
39	47603	Upper Door Shaft Sleeve
40	47604	Lower Door Shaft
41	47587	Castors
	47616	Legs
43	47588	Side Panel Left
45	47589	Bottom Shelf
46	47590	Evaporator
47	47591	Shelf Bracket
48	47573	LED Light
49	47592	Price Holder
51	47593	Shelf

47447 / PC1250B

